



# Installation Instruction

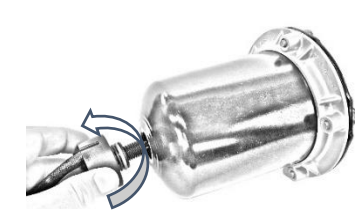

1. Unscrew the sensor, or the drain plug

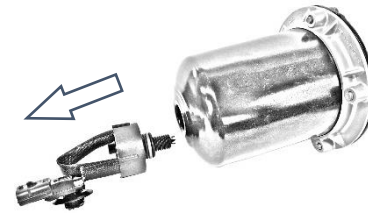

2. Remove the sensor, or the drain plug from the housing.




3. Unscrew and dispose the old screws.




4. Take the handle and screw it into the housing.




5. Push the handle and unscrew the handle, prior to removing it from the housing.

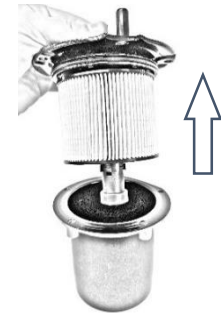


6. Pull the cap attached to the element from the housing.

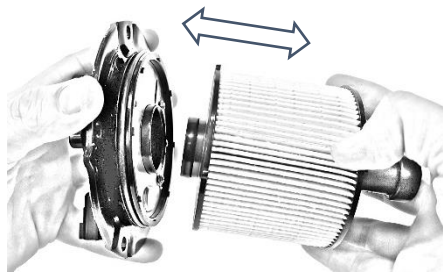


7. De-attach the element from the cap and dispose according to local regulations.

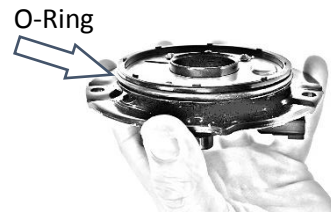

8. Replace the O-ring of the housing cap and lubricate it.

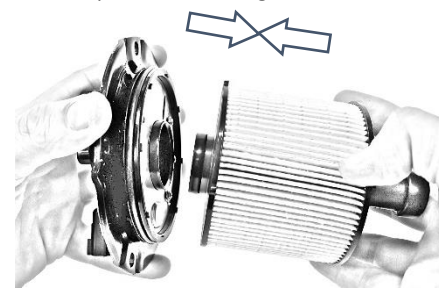

9. Install the new filter element into the housing cap.

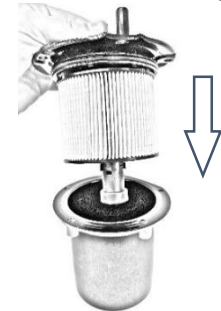


10. Install the filter element and housing cap into the housing.




11. Close the housing.



12. Tighten the new screws supplied with the new element.  
x5  
11 Nm ± 1

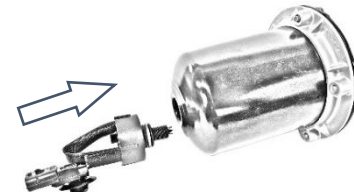

13. Replace sensor or drain plug seal and Take the sensor/drain plug and install it back into the housing.

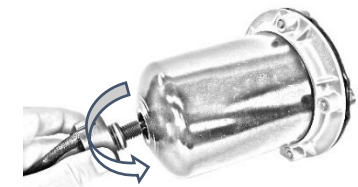

14. Screw the sensor (1,5Nm±0,5) or drain plug (3Nm;+0,5/-1,0) into the housing .